
ASME 2020 Schematic V3.31 Blue Shift - HPVDT UofT

Based largely on TITAN (WHPSC 2019/20)

Circuit Design / PCB Layout: Catherine Kucaba / Savo Bajic Programming: Ethan Baron / Yvonne Yang / Savo Bajic

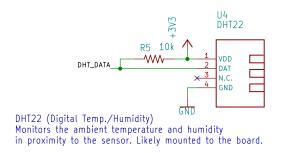

Connected to the digital camera and display to provide a view out

of the vehicle. This view is overlaid with the datas from the sensors.

SHDN button pulls down a pin to signal the RPi to shutdown properly.

Communicates with the system over USART (serial), with protection.



Light Control Buttons Pulling these lines to GND will toggle the corresponding lights. Battery Level Monitoring (main and analog sys. batt.) Uses resistor voltage dividers to bring the battery voltage (nominally 10V) down to the 3V3 level the STM32 is tolerant to. There are protection diodes for the main battery.

Lighting Lines

٧+

generate a desired current through the LEDs.

the 0.2, +V to raise the 0.2.

C11 L3

signal to the control pin.

GND





ANA_BAT


Data Connections


A slight mess.

STM32 sits in the middle to connect everything, collect data, and handle real—time events.

Protection diodes installed to shield subsytems systems in the event of any over/underloads on data lines.

Rotational Speed Encoders Used to determine the rotational speed of either the pedals (cadence) or wheel (encoder), using a digital interupt to pull down pins on the STM32. CADENCE ENCODER NS

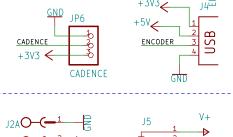

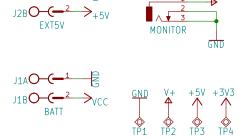


- One connector for an external 5V supply if the built in one is non-functional or 5V is needed externally. Test points are for the power buses.

First stage of protection from

the battery

Power connections and test points - One connector to the battery. - Another to pass power to the monitor used.

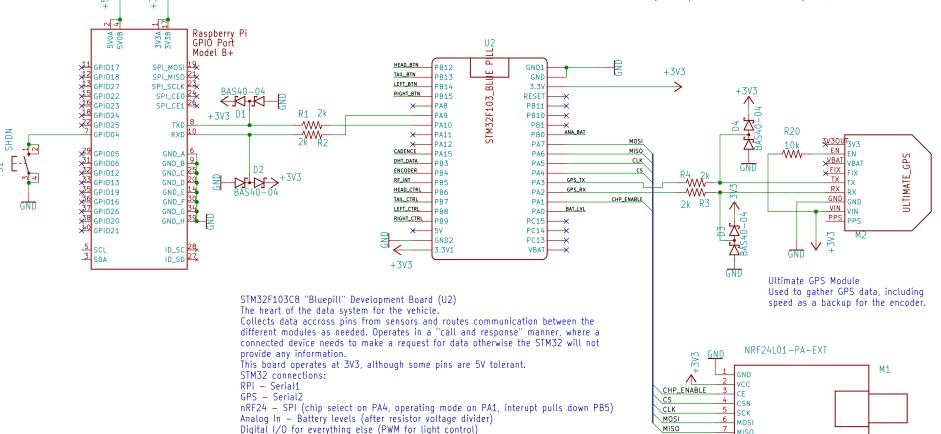

HEAD_CTRL C15 L5 AP303ĬŔTR-G1 → R22 10k R32 TAIL_CTRL


10k R26


Constant current boost converters. Take in the battery voltage and boost it to


Dimming is achieved though software by applying an approximately 1kHz PWM

Current set by resistors downstream of LEDs, I = 0.2/R. The 0.2 can be tweaked using the potentiometer and solder the jumper. Solder to ground to decrease


CTRL -

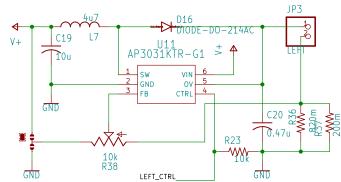

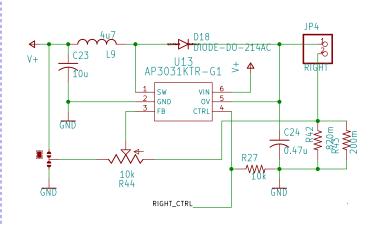

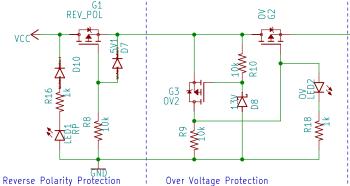

Kicks in based around value of D8 (Currently 13V)

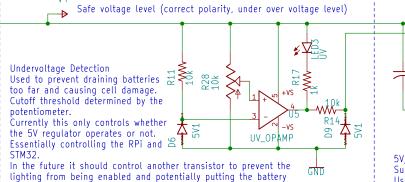

into an under voltage state.

nRF24L01-PA Module

Used for potential telecommunication to pit or chase vechicle.

Functional range proven to be up to 1.1km.

5V/4A Buck Converter Supplies power to RPi, the 3V3 comes from RPi's regulators to the STM32. Uses AP65450SP-13 chip and the 5V reference design in the datasheet. If there is any power fault leading up to this an appropriate LED will indicate it, otherwise the OK will light.